

# Watch a 'Come Follow Me' video from a USB Drive



## Quick Start Instructions

1. Plug it in and turn it on
2. Use 'Input' on LG TV to select HDMI1
3. Use the WD remote to play a video file from the WD USB Drive

## Audio Visual Equipment Description

1. LG brand LCD Television
2. WD (Western Digital) brand multimedia player. The WD device will play video saved on a USB drive that was downloaded from [LDS.org](http://LDS.org)
3. Toshiba brand DVD/VCR combination player

## Detailed Instructions Step 1: Plug it in and turn it on

Plug in Power



One plug powers the entire audio-visual cart.

Red light will glow on the power strip




Three devices are plugged into the power strip:

1. LG brand Television
2. Toshiba brand DVD/VCR combination player
3. WD (Western Digital) brand multimedia player. The WD device will play video saved on a USB drive that was downloaded from [LDS.org](http://LDS.org)

Turn on the LG TV by pressing the *Power* button on either,

the right side right side of the LG TV, or the red button on the LG remote

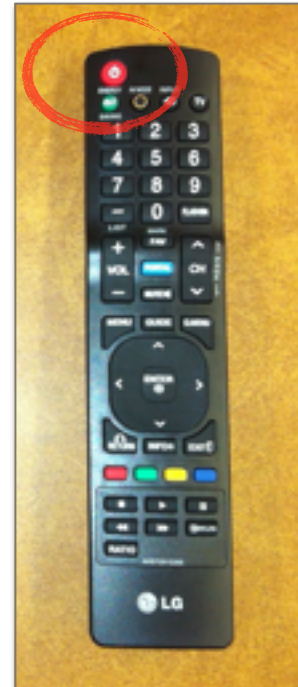

### Detailed Instructions Step 2: Use 'Input' on LG TV to select HDMI 1

Select 'HDMI 1' as the input to the TV by pressing the *Input* button on either,


the right side right side of the LG TV, or the top row on the LG remote



Repeatedly press *Input* to change between devices: DVD/VCR on AV1, and WD on HDMI1

DVD/VCR input is AV1

Western Digital (WD) input is HDMI1

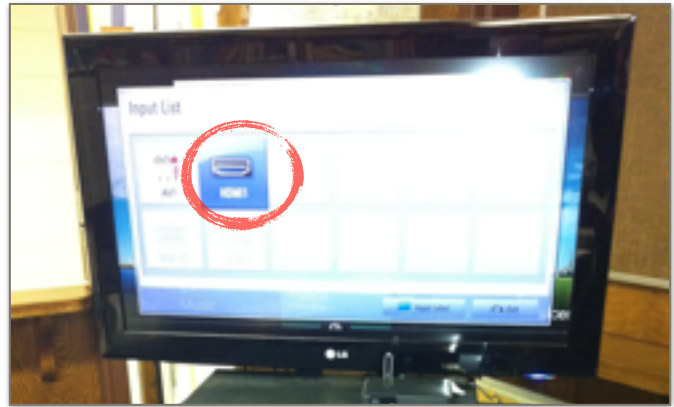

### Detailed Instructions Step 3: Use the WD remote to play a video file from the WD USB Drive

- Use the *Home* button to go the the main menu
- Use the *arrow* buttons to select 'File'
- The USB drive contents will appear in file folders
- Browse the file folders by pressing the arrow keys and *OK* button. Press *OK* to select and play a video



### Western Digital Device

1. Power input cable
2. HDMI Cable
3. USB Thumb drive containing MP4 videos downloaded from [LDS.org](http://LDS.org) using a computer
4. Power indicator, white LED

## Troubleshooting Guide

- **Power:** Check to see that each device is plugged in and receiving power. Power is indicated by a light on the front of the device.
  1. LG TV has a red light below the lower right hand edge of the screen
  2. Toshiba DVD/VCR has a blue glowing power button in the center of the left side
  3. WD device had a white light on the front panel, just to the right of the words 'WD TV'
- **Cable Connections:** Ensure audio visual cables are properly connected.
  - The DVD/VCR is connected via a cable with RCA jacks that are coded white, yellow, and red. White and Red are for stereo audio. Yellow is for video. Match the colors of the cables on the VCR to the color of the cables going into AV1 on the LG TV.

Toshiba VCR cables



LG TV AV1 input cables



- The WD device is connected via an HDMI cable as shown below.

Western Digital (WD) HDMI Cable



- **I can see the WD Movie playing, but there is no sound**
  - Turn the LG TV off for 10 seconds and turn on again
- **WD device says 'Compiling Media' for more than 1 minute**
  - Turn of the WD device by using the *Power* button on the WD Remote
  - Remove the USB thumb drive, and then plug it back in
  - Wait 10 second and turn it back on
- **How do I connect a laptop computer, ipad, iPhone or other device?**
  - Connect to the LG TV to your device using either:
    - a VGA cable (video) and 3.5mm jack (audio)
    - a HDMI cable to HDMI 2 on the back of the TV
  - Turn your device on
  - Use the *Input* button on the LG TV to select either PC or HDMI 2

LG TV inputs (on back of TV):

VGA Connector

3.5mm audio in



Written Nov 10, 2013 by:

Adam Robertson  
 Oak Hills 9th Ward  
 801-762-7263  
[adamerobertson@gmail.com](mailto:adamerobertson@gmail.com)